




## COOKTOP PARTS

For Models: RF367LXSQ0, RF367LXSB0, RF367LXSS0, RF367LXSY0  
(Designer White) (Black) (Black Stainless) (Universal Silver)

30" ELECTRIC CERAN  
FREESTANDING RANGE  
SELF CLEAN OVEN

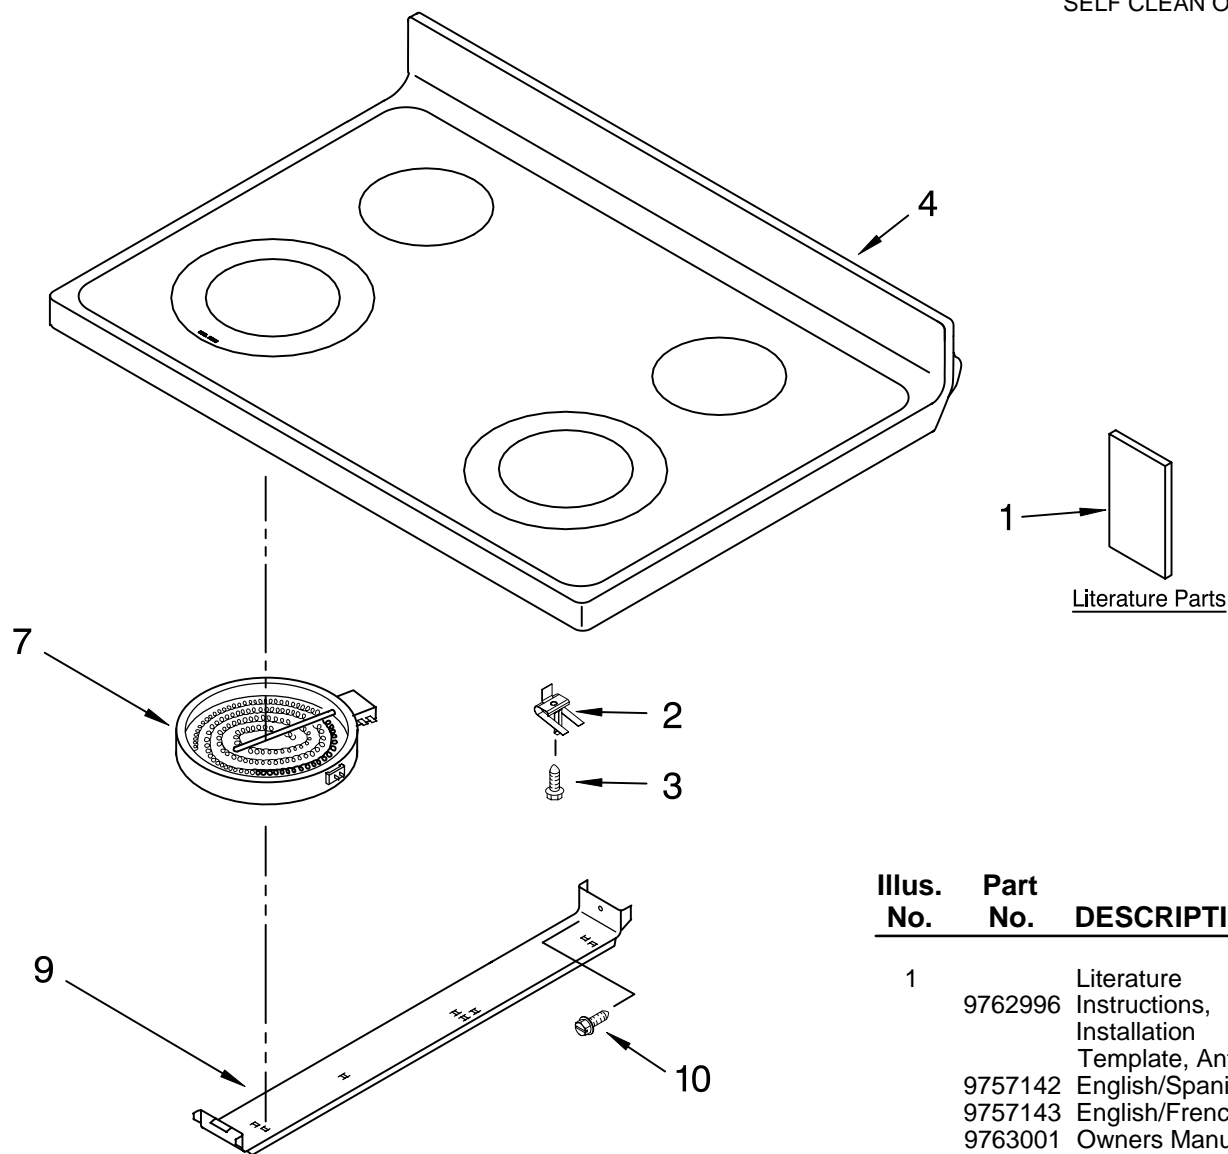


Illus. No.	Part No.	DESCRIPTION
1	9762996	Literature Instructions, Installation Template, Anti-Tip
	9757142	English/Spanish
	9757143	English/French
	9763001	Owners Manual
	9762979	Tech Sheet
	9762761	Safer Cooking Tips
2	W10035930	Spring, Locator
3	3196170	Screw
4		Cooktop
	9763330	White
	9763332	Black
7		Element, Surface
	9759351	2400/1200W – LF,RF
	8523698	1200 W – LR,RR
9	8272791	Bracket, Element
10	3196169	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CONTROL PANEL PARTS

For Models: RF367LXSQ0, RF367LXSB0, RF367LXSS0, RF367LXSY0  
(Designer White) (Black) (Black Stainless) (Universal Silver)

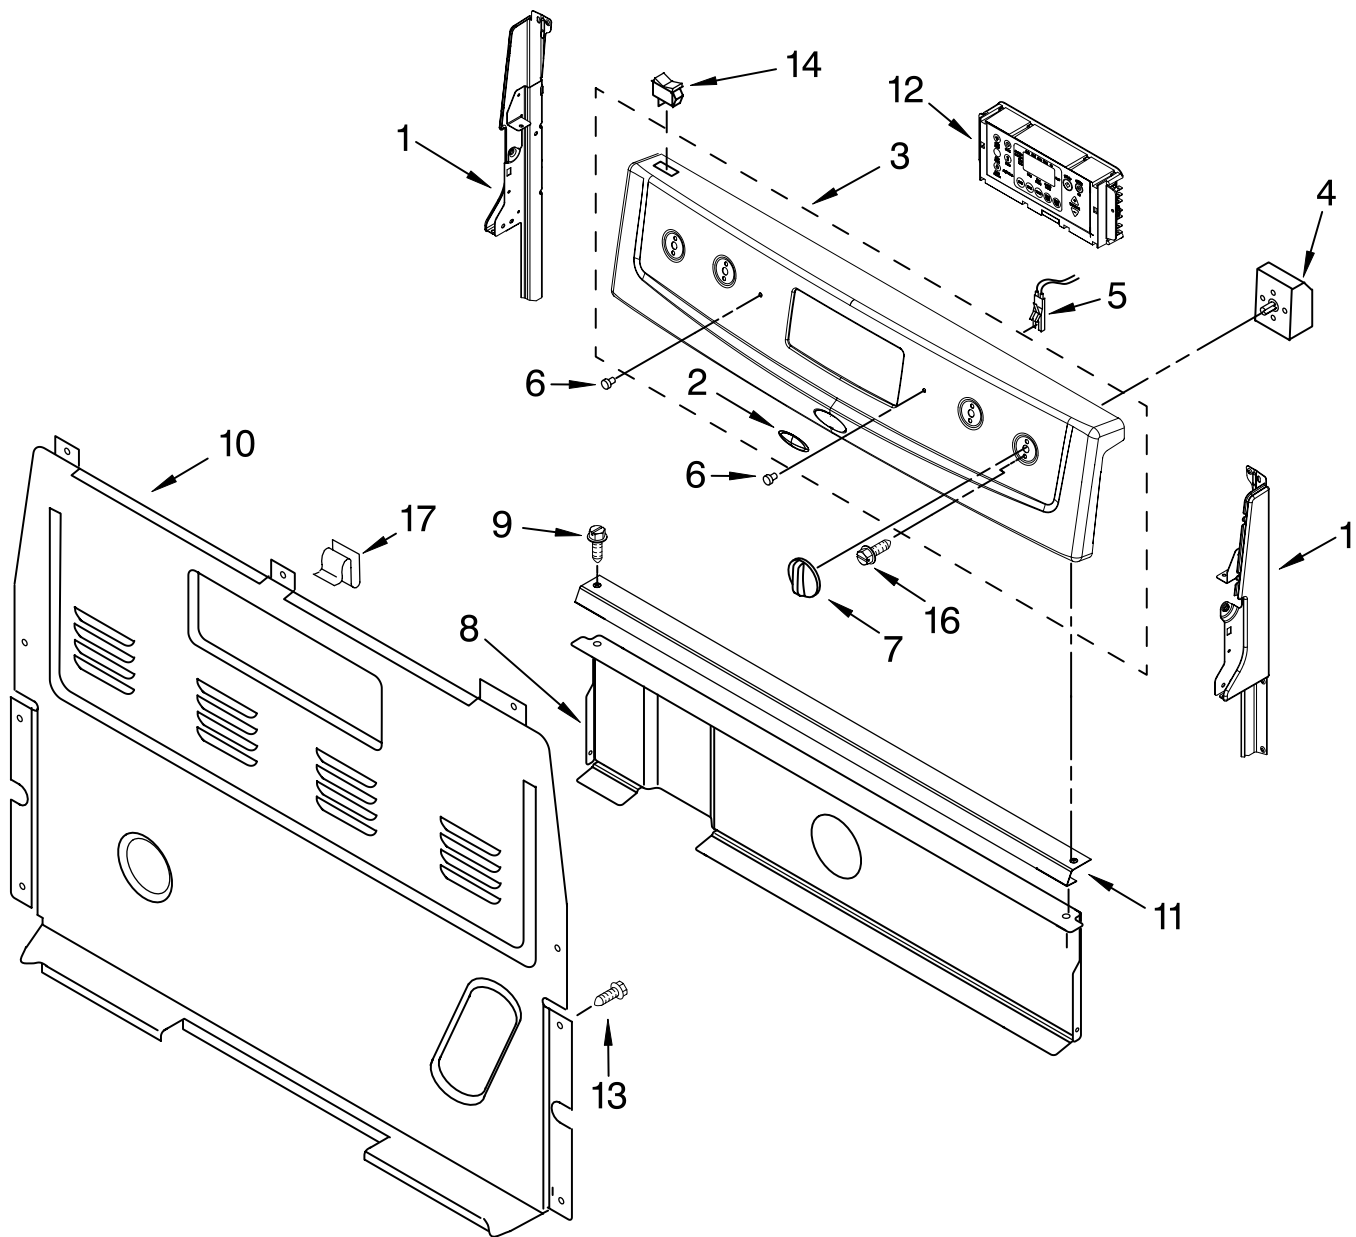


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	W10009080	Endcap Black Left	4	9758060	Switch, Infinite LF,RF	11	9762095	Brkt-Mntg, Console
	W10009090	Black Right		3148951	LR,RR	12	9763089	Black
	W10009040	White Left	5	8523265	Light, Ind. (2)		9763088	White
	W10009050	White Right	6	3196068	Lens, Light (2)	13	3196178	Screw
2	9757609	Nameplate	7		Knob, Infinite (4)	14		Switch, Rocker
3		Panel, Control		9761964	Black		3149360	White
	9762021	Black		9761962	White		3148564	Black
	9762019	White	8	8523280	Shield, Heat	16	3400882	Screw
	9762022	Stainless	9	3196166	Screw	17	8273564	Clip
	9762637	Universal Silver	10	8272473	Cover, Upper			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CHASSIS PARTS

For Models: RF367LXSQ0, RF367LXSB0, RF367LXSS0, RF367LXSY0  
(Designer White) (Black) (Black Stainless) (Universal Silver)

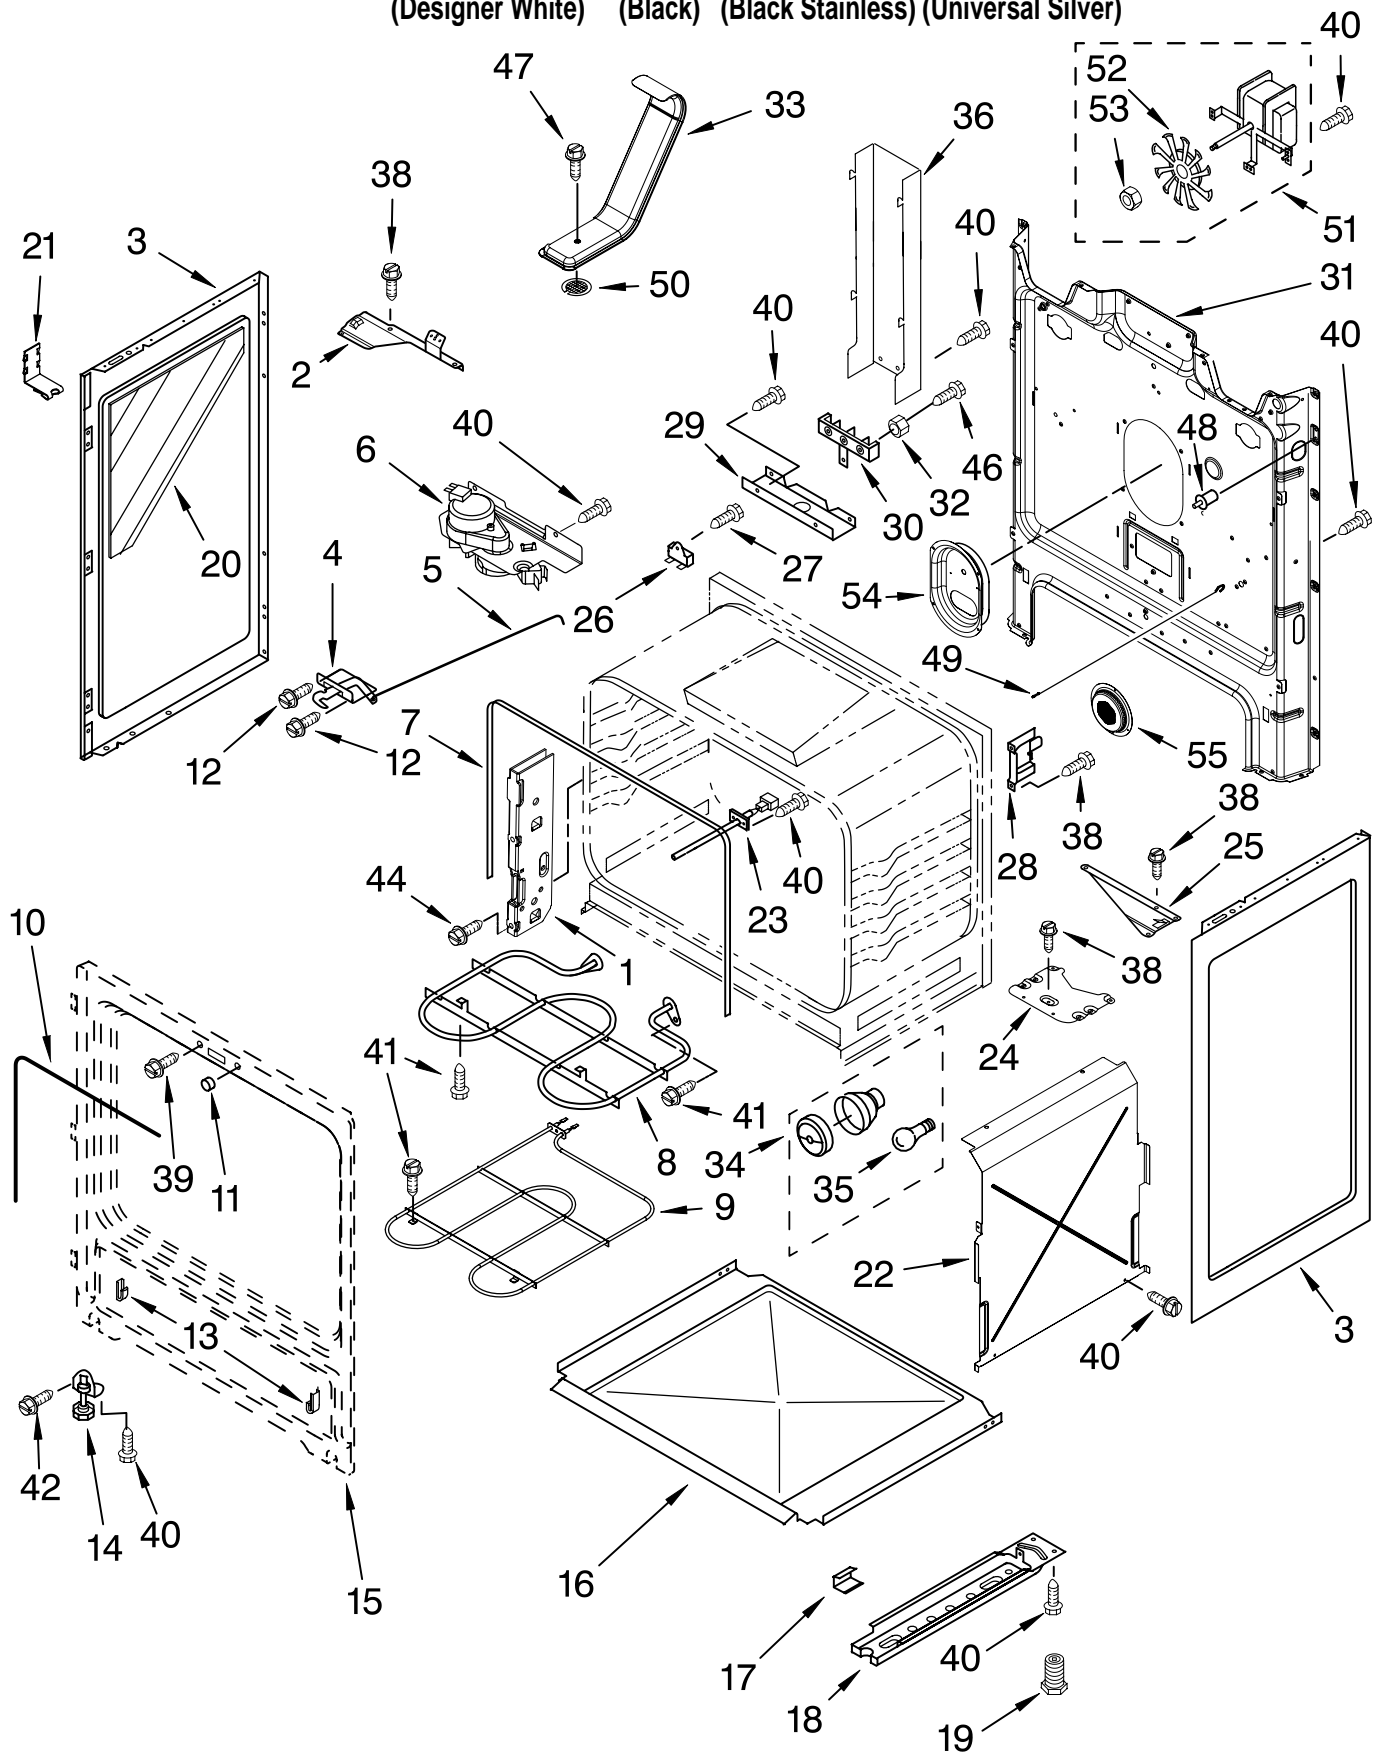


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

**For Models: RF367LXSQ0, RF367LXSB0, RF367LXSS0, RF367LXSY0**  
**(Designer White) (Black) (Black Stainless) (Universal Silver)**

**FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST**

# DRAWER & BROILER PARTS

For Models: RF367LXSQ0, RF367LXSB0, RF367LXSS0, RF367LXSY0  
(Designer White) (Black) (Black Stainless) (Universal Silver)

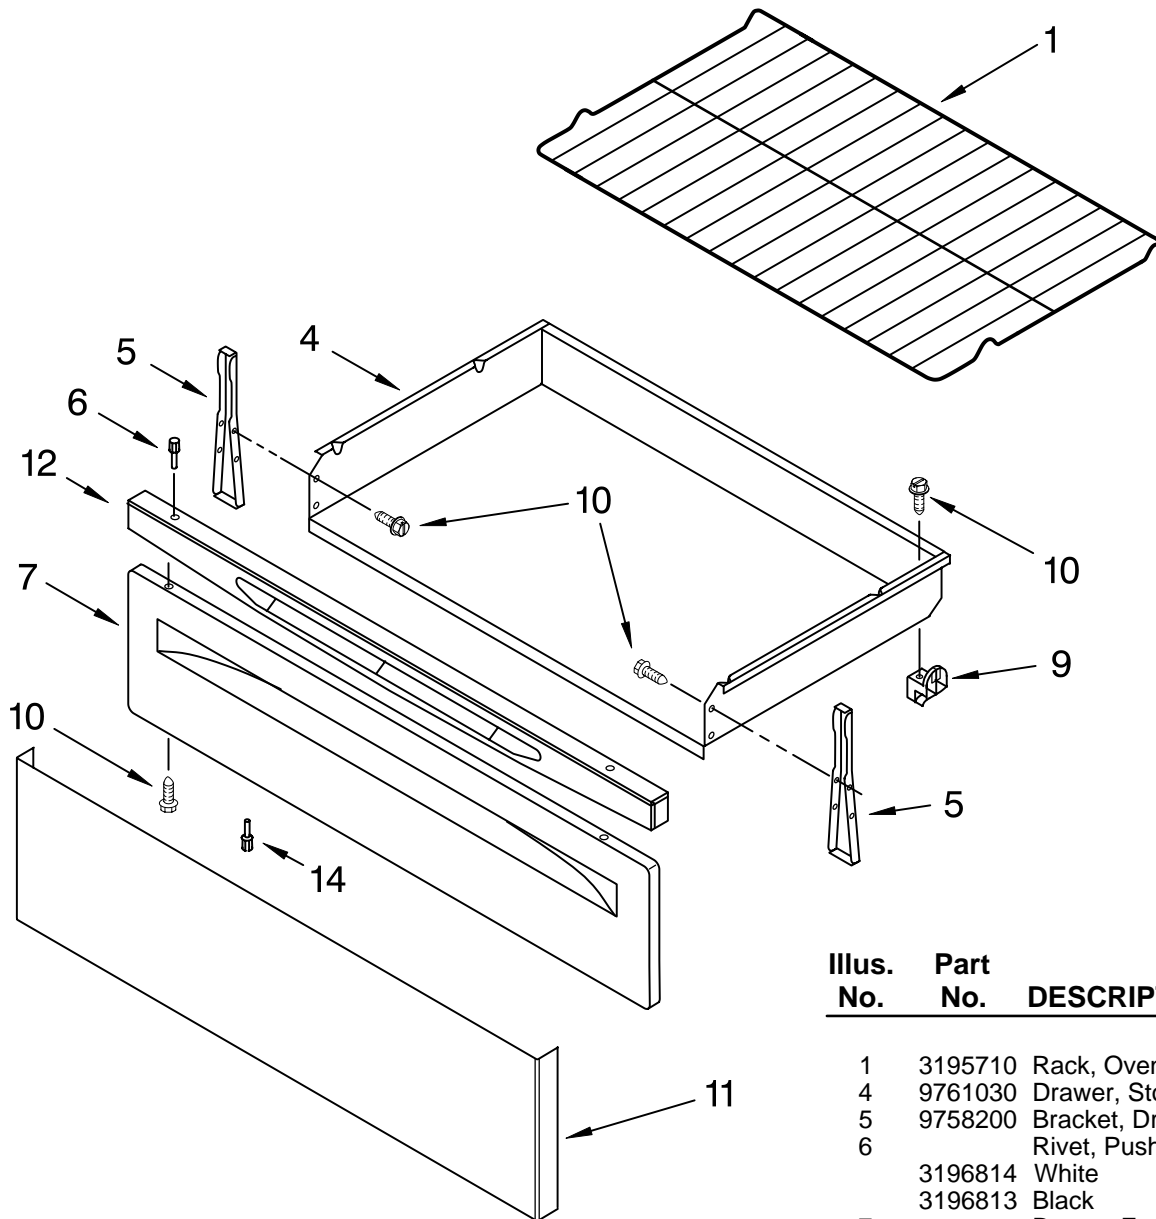


Illus. No.	Part No.	DESCRIPTION
1	3195710	Rack, Oven (2)
4	9761030	Drawer, Storage
5	9758200	Bracket, Drawer(2)
6		Rivet, Push (2)
	3196814	White
	3196813	Black
7		Drawer Front
	8053339	White
	8053341	Black
9	8053334	Glide, Drawer (2)
10	3196168	Screw
11	9755798	Panel, Stls Model
12	9757219	Handle, Stls Model
	9762251	Universal Silver
14	9781235	Clip, Stls Model

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DOOR PARTS

For Models: RF367LXSQ0, RF367LXSB0, RF367LXSS0, RF367LXSY0  
(Designer White) (Black) (Black Stainless) (Universal Silver)

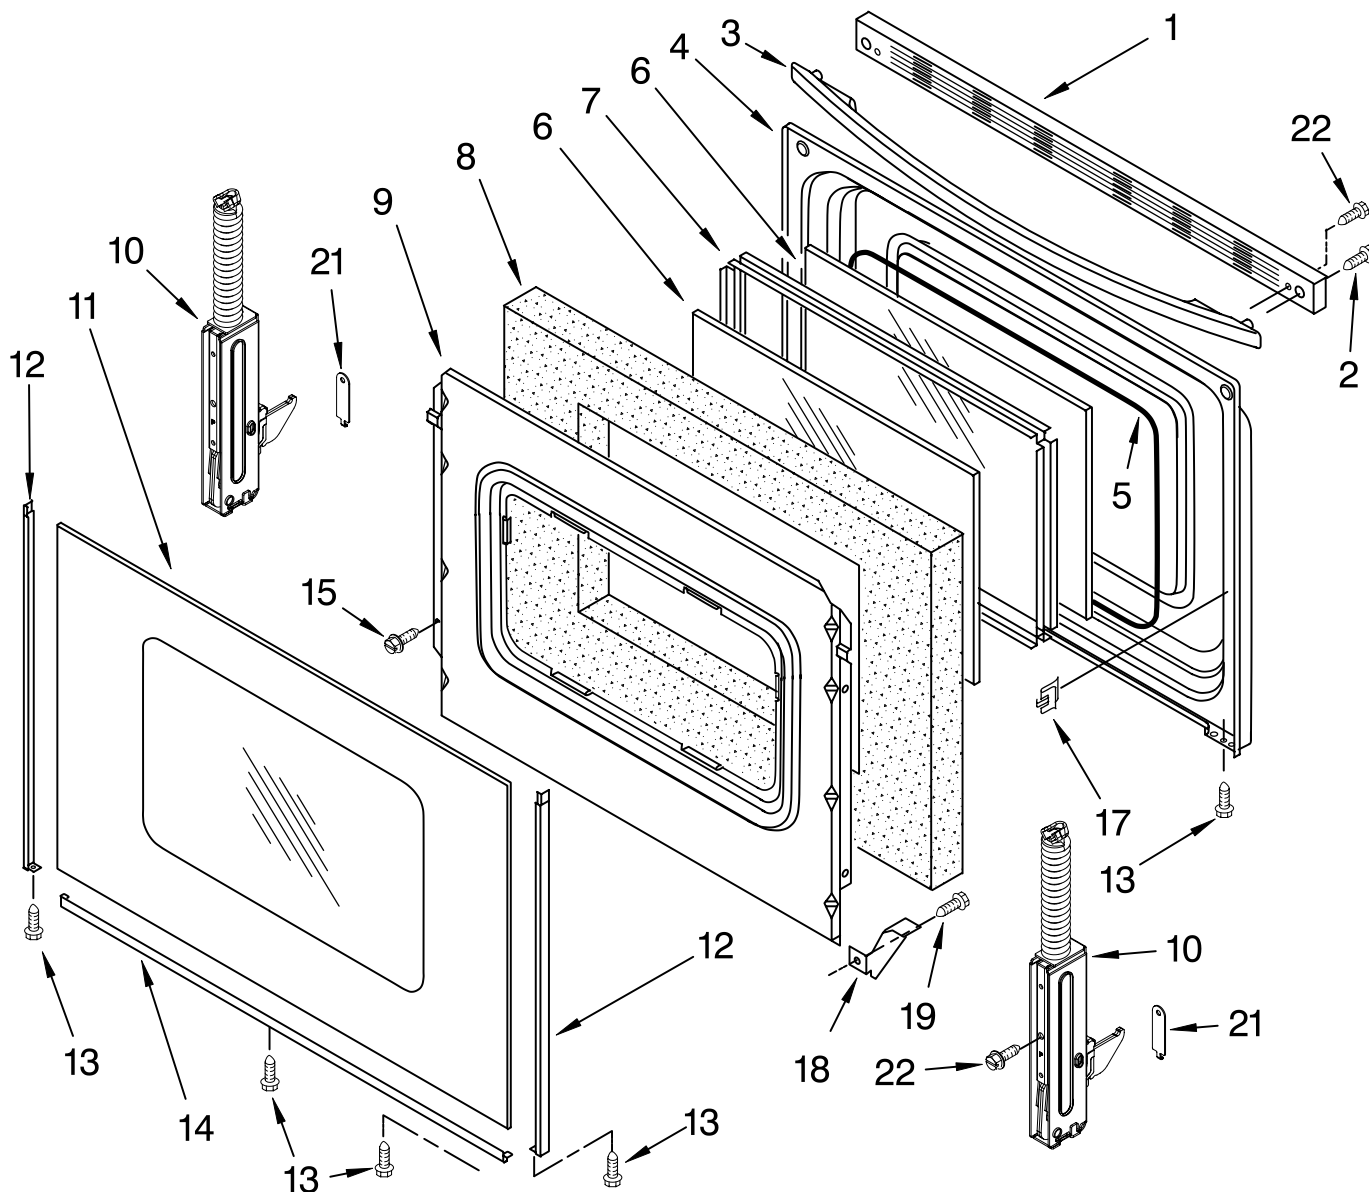

Illus. No.	Part No.	DESCRIPTION
1	9762391	Trim, Top
	9761975	Black
	9762394	White
	W10067560	Black Stainless
		SS and Unvsl Slvr Model
2	3196164	Screw
3		Handle, Door
	9761983	Black
	9761982	White
	9761985	SS for Unvsl Slvr
4	9761344	Liner, Door
5	8522414	Seal, Window
6	9758162	Glass, Inner (2)
7	3186289	Frame, Glass

Illus. No.	Part No.	DESCRIPTION
8	8272618	Insulation, Door
9	9761357	Retainer, Insln
10	9761493	Hinge, Door (2)
11		Glass, Outer Door
	W10075990	Black
	W10075980	White
	9756435	Black Stainless
12		Trim, Side
	8523171	Black Left
	8523165	Black Right
	8523172	White Left
	8523166	White Right
	9762249	Unvsl Slvr LH
	9762250	Unvsl Slvr RH

Illus. No.	Part No.	DESCRIPTION
13	3196160	Screw
14		Trim, Bottom
	8523177	Black
	8523175	White
	8523180	Black Stainless
	W10067550	SS and Unvsl Slvr Model
15	W10031790	Screw
17	3196025	Clip, Door Glass
18	3196794	Bracket, Window(2)
19	3196165	Screw
21	9761517	Clip, Dr Mntg (2)
22	W10031780	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OPTIONAL PARTS

For Models: RF367LXSQ0, RF367LXSB0, RF367LXSS0, RF367LXSY0  
(Designer White) (Black) (Black Stainless) (Universal Silver)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

Parts Not Illustrated and  
Optional Parts (Not Included)

## SPLICING WIRES--25FT. LENGTH

242828	Wire, Black	12 Ga. 150° c
242821	Wire, Blue	14 Ga. 150°c
242822	Wire, Brown	14 Ga. 150°c
242830	Wire, Brown	14 Ga. 200°c
242823	Wire, Green	14 Ga. 150°c
242824	Wire, Orange	14 Ga. 150°c
242825	Wire, Red	14 Ga. 150°c
242831	Wire, Red	14 Ga. 200°c
242827	Wire, Yellow	14 Ga. 150°c

## REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch-Up Self-Clean(1/2 Pt)
261582	Grease

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

## INSULATION

261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
240132	Insulation, Fiberglass (2-1/2" x 22" x 120")

## PAINT, TOUCH-UP (1/2oz.)

72017	White
4392899	Biscuit
511873	White Porcelain (2 Oz.)

## PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
4392901	Biscuit
285006	Superior Black
206922	Primer (White)

## PAINT, BULK (1 qt.)

799344	White (Uncut)
4392900	Biscuit(Uncut)

## ACCESSORY PARTS

241430	Foil, Aluminum Oven (18" x 25')
3191048	Cleaner, Glass

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

## ANTI-TIP KIT

W10017440	Anti-Tip Kit
-----------	--------------

## WIRING HARNESS PARTS

9762815	Harness, Wire (Cooktop Left)
9762816	Harness, Wire (Cooktop Right)
9762955	Harness, Wire (Sensor/Dr Switch)
9762429	Harness, Wire (Main)
8523279	Wire, Ground
8524132	Shield, Wiring
313660	Clip, Ground Wire
3196173	Screw
3196154	Screw, Ground

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST